MT 263

Instructions for use

Whirlpool

4619 694 20133

GB IN

Whirlpool Sweden AB

CONTENT

GB IN

	PAGE
A NOTE TO YOU	1
OVEN OVERVIEW	1
ACCESSORIES	1
CONTROL PANEL	2
DISPLAY INDICATORS	2
SYMBOL DESCRIPTION	3
CHILD SAFETY / EMPTY OVEN START PROTECTION	3
TURNTABLE ON / OFF	3
BEFORE YOU OPERATE THE APPLIANCE	4
ENVIRONMENTAL HINTS	4
PRECAUTIONS AND SUGGESTIONS	5
COOKING INTERRUPTION	7
HOW TO CHOOSE POWER LEVEL?	7
OPTIONAL CLOCK DISPLAY	8
JET START FUNCTION	9
TIME AND POWER	10
AUTO DEFROST FUNCTION	11
MANUAL DEFROST FUNCTION	12
GRILL FUNCTION	13
GRILL IN COMBINATION WITH MICROWAVES	14
CRISP FUNCTION	15
AUTO CRISP FUNCTION	16
QUICK HEAT FUNCTION	18
FORCED AIR FUNCTION	19
FORCED AIR IN COMBINATION WITH MICROWAVES	20
MAINTENANCE	21
WARRANTY - RULES & REGULATIONS	22
TROUBLE SHOOTING GUIDE	24
DATA FOR TEST HEATING PERFORMANCE	24
TECHNICAL SPECIFICATIONS	25

TECHNICAL SPECIFICATIONS

Type number	**MT 263**	
Supply voltage	240 V / 50 Hz	
Power consumption	3000 W	
Fuse	13 A	
Timer	Electronic	
	Microwave power (acc. to IEC705. 1000 g water)	
Full power / JET	1000 W	
	850 W	
	750 W	
Combination (Max)	650 W	
	500 W	
	350 W	
Manual Defrost	160 W	
	90 W	
Power Grill	900 W	
Power Forced Air	1400 W	
	Auto defrost food class table	
	Weight interval	**Steps**
1-4	50-500 g	25 g
	500-800 g	50 g
	800-2000 g	100 g
5	50-500 g	25 g
	500-800 g	50 g
	800-3000 g	100 g
	Auto crisp food class table	
	Weight interval	**Steps**
1-4	200-600 g	50 g
Dimensions:	**H x W x D**	
Outer dimensions:	318 x 529 x 462	
Oven compartment:	205 x 335 x 370	26L

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

* The Turntable and turntable support is in place.
* The Plug is properly inserted in the wall socket.
* The Door is properly closed.
* Check your Fuses and make sure that there is power available.
* Wait for ten minutes and then try to operate the oven once more.

This is to avoid unnecessary calls for which you will be charged.
When calling for Service, please give the serial number and type number of the oven (see Service label).

Important:
If the mains cord needs replacing it should be replaced by the original mains cord which is available via our service organisation. The mains cord must only be replaced by a trained service technician.

⚠ WARNING !

Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against explosure to microwave energy.
Do not remove any cover.

DATA FOR TEST OF HEATING PERFORMANCE

in accordance with IEC 705.

The International Electrotechnical Commission, SC 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

MT 263				
Test	**Amount**	**Approx. time**	**Power level**	**Container**
A	1000 g	12 min	750 W	Pyrex 3.226
B	475 g	5 min	750 W	Pyrex 3.827.80
C	900 g	14 min	750 W	Pyrex 3.838.80
Defrosting, minced meat	500 g	14 1/2 min on auto		Place on a plastic plate
A	1200 g	15 min	750 W	Pyrex 3.346.87 Turntable on standstill

A NOTE TO YOU

Thank you for buying a Whirlpool appliance!

WHIRLPOOL appliances have everything you would expect of a superior appliance, plus the distinct style and thoughtful details which contribute to the overall look of your home and your enjoyment of it.

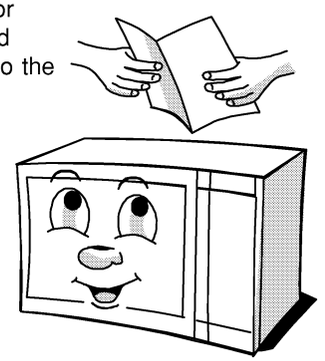

To ensure that you enjoy many years of trouble-free operation, we developed this Instruction For Use. It contains valuable information concerning how to operate and maintain your new appliance properly and safely.
Please read it carefully and keep this book in a safe place for future reference.

OVEN OVERVIEW

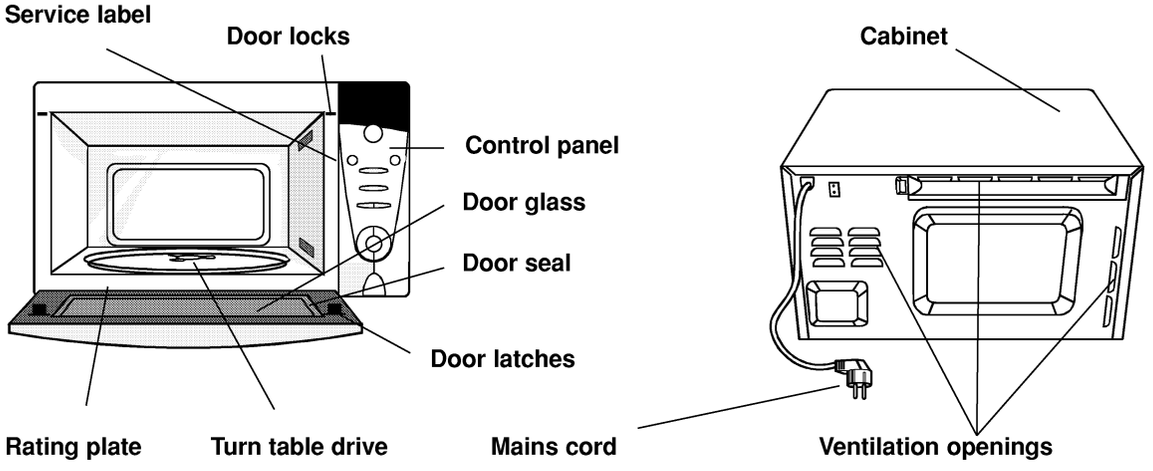

ACCESSORIES

Turntable support

Glass turntable


Baking grid

Crisp-plate

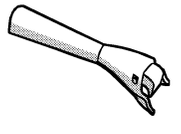
Crisp handle

Twoplate stacker

Cover

CONTROL PANEL

Digital display. This display includes a 24 hour clock and indicator symbols to tell you the time of day, cooking time, power level, etc.

Adjust knob. Use this knob to set the cooking time, time of day or weight.

Auto Defrost button. Use this button to select type of food to be defrosted.

Forced air button. Use this button to select the Forced air function and temperature.

Power button(center). Use this button to check the set microwave power level.

Power button(minus). Use this button to reduce the set microwave power level

Start / **Jet Start button.** Press this button to automatically start with the maximum power level and the cooking time set to 30 seconds. Each additional press increases the cooking time by 30 seconds. This button also works as a normal start button after setting a function.

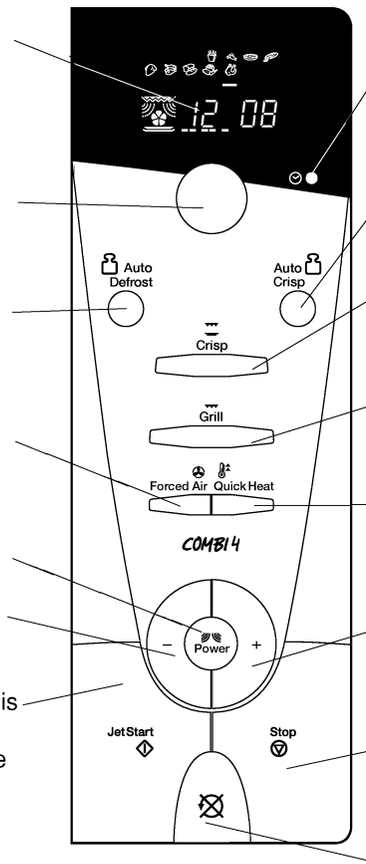

Clock button. Use this button to select the 24 hour clock and set the time of day.

Auto Crisp button. Use this button to select one of 4 food classes.

Crisp button. Use this button when cooking with the Crisp plate (manually).

Grill button. Use this button to select the grill function.

Quick heat button. Use this button to quickly preheat the oven cavity.

Power button(plus). Use this button to increase the set microwave power level

Stop button. Use this button to stop or reset any of the oven functions.

Turntable button. Use this button to turn the turntable function on / off.

DISPLAY INDICATORS

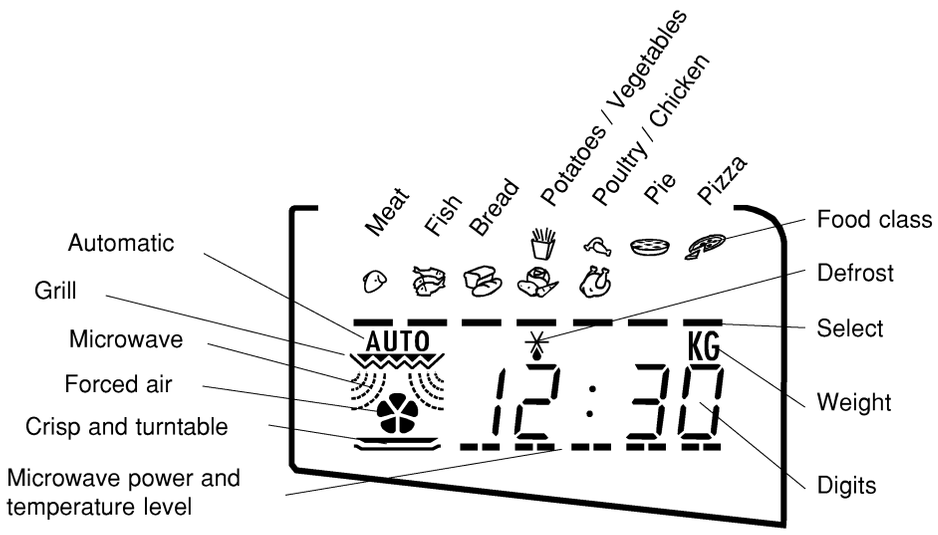

WARRANTY RULES AND REGULATIONS

SPECIAL NOTES TO CUSTOMER

Dear Customer,

Shifting Your Whirlpool Microwave Oven:
It is essential to pack the Microwave Oven properly, before it is moved from one place to another, to prevent any damages in transportation. This becomes most essential when you move the machine from,one city to another.

In addition to proper packaging it is important to insure for any transit damages. Damages to the Microwave Oven during transportation by the customer is not covered under warranty provided by **Whirlpool Of India Limited.**

Service On Sunday:
In some of the cities where Whirlpool Of India Limited is providing service, customers can avail Sunday service on specific request. For details contact our branch office.

If you have any queries about the product, please write to:

Consumer Service Department
Whirlpool Of India Limited
A-8, Qutab Institutional Area
'Vaitalik'2nd Floor; New Delhi -110067
Tel: (91) -1 I-6857180/8180
Fax: (91) -1 I-6857701

WARRANTY RULES AND REGULATIONS

WHIRLPOOL OF INDIA LIMITED

Whirlpool of India Limited: (The Company) warrants to the original domestic purchaser of this Microwave Oven that it is free from defects in materials and workmanship.

During 12 months after purchase of this Whirlpool Microwave Oven, all functional parts of the Microwave Oven, which proves to be defective in material or workmanship will be replaced free of charges on intimation to the Company- authorized service center nearest to the place where the appliance is installed. The magnetron will however be covered for 24 months from the date of purchase. Labor charges will be charged as applicable from year two.

The warranty is subjected to Limitations of Warranty given below.

What is not covered:
* Cabinet
* Knobs, Control panel & other plastic parts

LIMITATIONS OF WARRANTY

1. The Warranty does not apply:
   - If damage is caused by accident, misuse, improper installation or neglect in following instructions of the user manual issued by the Company.
   - If damage is caused by improper electrical circuit outside the Microwave Oven or by a defective electrical supply.
   - Damage caused by rodents/insects
   - If any part of the Microwave oven has been tampered with, altered,repaired or serviced by any personal not authorized by the Company
   - If the serial number on the Microwave Oven is defaced, missing or altered.
   - If the Microwave Oven is taken out of India
2. Parts repaired or replaced under this warranty -are warranted throughout the remaining of the original warranty period only.
3. The company is not liable for any delay in servicing due to reasons beyond the control of the Company or any of its authorized service centers.
4. The Company is not liable for any incidental or consequential damages.
5. The Warranty is not applicable if the Microwave oven is used for Commercial purpose or at place institutions, hospitals, community halls, hostel and other similar applications.
6. For any home service under this warranty beyond City/Town limits or 25 km away from the Service Center whichever is lesser, a fixed charge of Rs.50/- will be collected from the customers in addition to the actual 'to and fro' charges by the shortest route. Alternatively, the Customers can bring the Microwave Oven to the nearest Service Center for carrying out the necessary repairs, at his own cost
7. This is the only warranty covering the Microwave Oven given by the Company.
8. The warranty is issued at Delhi and courts at Delhi shall have exclusive jurisdiction on matters covered by or following from the warranty.

SYMBOL DESCRIPTION

	Defrost		Turntable on / off
Auto Defrost	Auto defrost		Quick heat
	Clock		Grill
	Forced air		Turntable
	Crisp		Acoustic signal
	Microwave power		Start
Auto Crisp	Auto crisp		Stop

CHILD SAFETY / EMPTY OVEN START PROTECTION

This oven has an automatic child safety function which is activated one minute after the oven has returned to "stand by". The oven is in "stand by" when the 24 hour Clock is displayed, or if the Clock has not been set, when the display is blank.

The door must be opened and closed e.g. putting food into it, before the safety lock is released. If you try to operate the oven without putting food into it the display will display **"door"** indicating that you must open and close the door before operating the oven.

TURNTABLE ON / OFF

The turntable can be turned off in order to accommodate large utensils. This is useful when cooking a large gratin, salmon or a big turkey. This enables you to use large square utensils too big to turn without coming into contact with the cavity walls.

The table shows which functions it is possible to use with the turntable on or off. If you switch the turntable off before or during use of a function which does not support the turntable on standstill, the oven will stop and a signal will be heard. The turntable symbol will flash briefly. The oven will return to standby mode if no buttons are pressed within 30 seconds.

Turntable on / off

Function	On	Off
Jet Start	x	x
Time and Power	x	x
Auto Defrost	x	
Grill	x	
Grill & Microwaves	x	x
Crisp	x	
Auto Crisp	x	
Quick Heat	x	x
Forced air	x	x
Forced air & Microwaves	x	x

BEFORE YOU OPERATE THE APPLIANCE

Only use the microwave oven for domestic use and for its cooking purposes.

Make sure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean inside it with a soft, damp cloth.

Prior to connecting, check that the voltage on the rating plate corresponds to the voltage in your home.

Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. The control side of the unit is the heavy side. Use care when handling.

Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 15 cm above the oven.

The oven can operate in an ambient temperature ranging from +5°C to +35°C.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results. Make sure the microwave oven feet are in place and ensure the space underneath the oven is empty to ensure proper airflow.

The oven can be operated only if the oven door is firmly closed.

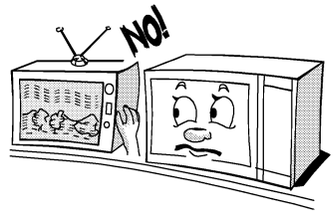

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

The earthing of this appliance is compulsory by law. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

⚠ WARNING!

THIS APPLIANCE MUST BE EARTHED! ⏚

ENVIRONMENTAL HINTS

Packing

The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

Appliance

The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

MAINTENANCE

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

At regular intervals, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

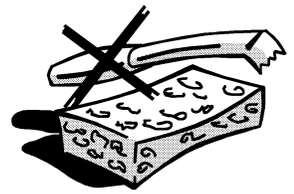

This oven is designed to operate with the turntable in place.
Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Odours inside the oven can be eliminated by adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

⚠ WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

Abrasive cleansers, steel-wool pads, gritty wash cloths, etc., can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.
Do not spray directly on the oven.

FORCED AIR IN COMBINATION WITH MICROWAVES

During Forced air cooking you can switch the microwaves off by reducing the microwave power level to 0 W. The Max. possible Power level when using the Forced air is limited (se technical specifications).

Forced air combined with microwaves is ideal for cooking roast meats, poultry, jacket potatoes, frozen convenience foods, sponge cakes, pastry, fish and puddings.

For best results: Combined cooking functions normally call for higher temperatures, to allow the oven to operate correctly e.g. if you usually cook a recipe at 175°C Forced air only, you will need to increase the temperature by approx. 25°C to 200°C when using Forced air and microwaves.

Don't leave the door open for long periods as the temperature inside will drop.

This function can be used with the turntable function switched off. When cooking such foods as gratin's etc. with the turntable on standstill, you may rotate the food halfway through the cooking time.

How to choose the correct power level	
Power level	**Suitable foods**
90 - 160 W	Cakes, Bread, Roasts
160 - 350 W	Baked fish, Fish gratins
350 - 500 W	Poultry
500 - 650 W	Large Chicken, Vegetables ie. Jacket Potatoes, Gratins.

Important!
Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking with Forced air and microwaves combined.

Use the Grill-grid to put food on to allow the air to circulate properly around the food.

Do not use the Crisp-plate with this function.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Forced air button. Also the power level is possible to change by pressing the **+** / **-** buttons button.

USER ACTION

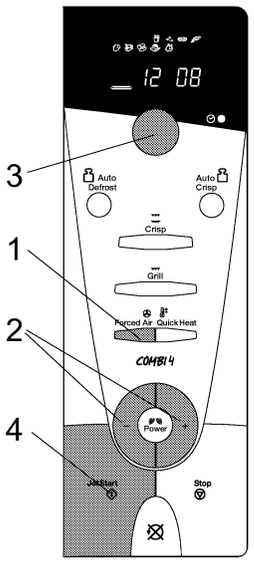

1. Press the FORCED AIR button repeatedly until the desired temperature setting is reached.
2. Press the **+** / **-** buttons repeatedly to select a desired Power level.
3. Turn the ADJUST knob until the required time is indicated.
4. Press the START button.

OVEN REACTION

* The Forced air indicator is lit.
* The temperature indicator is flickering.
* The set temperature is displayed.

* The microwave symbol is lit.
* The power level is displayed.

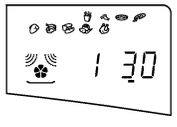

* The time is displayed.

* The Microwave symbol flashes.
* The Forced air symbol flashes
* The cooking time is displayed counting down

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

PRECAUTIONS AND SUGGESTIONS

⚠ CAUTION!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Electrical shock, fire or other hazards may result.

Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.

Do not let the mains cord hang over edge of table or counter.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for storage purposes.

Do not leave paper products, cooking utensils, or food in the cavity when not in use.

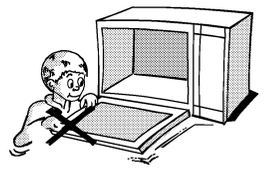

Never lean on the door when the door is open. Injury could result.

Do not heat, store or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Use this appliance only for its intended use as described in this manual.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not over-cook food. Fire could result.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn, and some plastics can melt if used when heating foods.

⚠ WARNING

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.

If material inside / outside the oven should ignite, keep oven door closed, turn the oven and fan off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

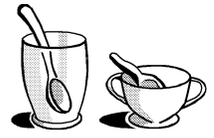

When heating liquids, e.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow to stand for a short time, stirring again before carefully removing the container from the oven.

PRECAUTIONS AND SUGGESTIONS

⚠ WARNING!

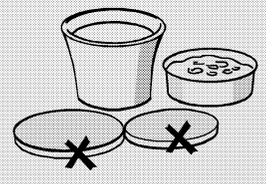

Do not use your microwave oven for heating food or liquids in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

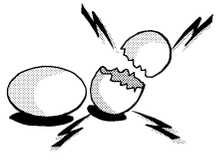

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

Some foods which have a low water content E.g. oil, chocolate and some pastries with sweet fillings, must be heated carefully.

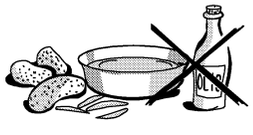

Do not use your microwave oven for deep frying, because the oil temperature cannot be controlled

One of the major advantages of microwave ovens is the short cooking time. Therefore, recommended times for cooking or reheating food should not be exceeded.

When making popcorn, it is neccessary to put the popcornbag on top of a small plate, in order to obtain best result.

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

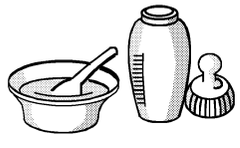

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.
Ensure the Lid and the Teat are removed before heating!

Use hot pads. Microwave energy does not heat containers, but the hot food does. Heat from the Grill and Forced air will cause container and oven parts to become hot. Also note that the Crisp-plate always becomes very hot when used.
Use oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

⚠ CAUTION!

There are a number of accessories available on the market. Before you buy, make sure they are suitable for microwave use.

When you put food in the microwave oven, ensure that food, food supports or covering do not come in direct contact with any of the internal walls or the ceiling of the cavity.

This is especially important with accessories made of metal or metal parts. If accessories containing metal comes in contact with the internal walls or the ceiling, while the oven is in operation, sparking will occur and the oven will be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

FORCED AIR FUNCTION

Forced air operates by hot air coming from the rear wall. It is then circulated by a fan which ensures even heat distribution throughout the cooking. The heat completely envelopes the food, sealing in the flavour. The cooking is done at a slightly lower temperature than conventional cooking. E.g. if the recommended temperature for a conventional oven is 200°C, you should choose 175°C. The default setting when pressing the Forced Air button is 175°C

Don't leave the door open for long periods as the temperature inside will drop.

For cooking times under 20 minutes, preheat the oven using the Quick Heat function. When the temperature is reached, the oven switches automatically to Forced air, insert the food, close the door and set the cooking time. Press the start button.

Forced air is ideal for cooking meringues, pastry, sponge cakes, soufflés, poultry, roast meats and convenience foods.

This function can be used with the turntable function switched off. When cooking such foods as gratin's etc. with the turntable on standstill, you may rotate the food halfway through the cooking time.



Use the Baking-grid to put food on to allow the air to circulate properly around the food.

Use the Crisp-plate as a baking plate on top of the Baking-grid when baking cookies, meringues or rolls.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Forced air button.

USER ACTION	OVEN REACTION
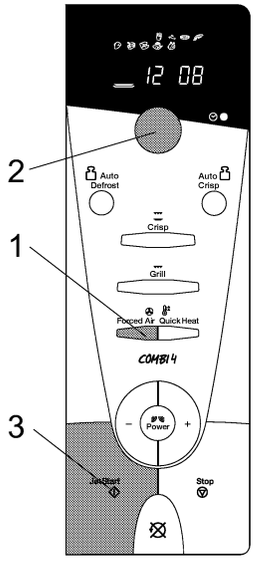 1. Press the FORCED AIR button repeatedly until the desired temperature setting is reached.	* The Forced air indicator is lit. * The temperature indicator is flickering. * The set temperature is displayed.
2. Turn the ADJUST knob until the required time is indicated.	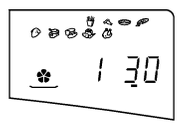 * The time is displayed.
3. Press the START button.	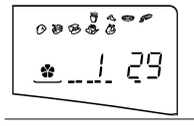 * The Forced air symbol flashes * The cooking time is displayed counting down
	 **When the cooking time has elapsed** a signal will be heard and the cooking process will stop.

QUICK HEAT FUNCTION

Sometimes it is necessary to preheat the oven to obtain the very best result. This is quickly obtained with the Quick Heat function. Preheating of the oven is usually done before using the Forced air function. The oven therefore switches to this function automatically when the set temperature is reached.

The oven then keeps the set temperature for 10 minutes before switching off. During this time the oven is waiting for you to insert the food and make the normal settings for cooking.

Preheating is always done with the oven empty or with the grill-grid in place, therefore it is important that the microwave function is off. This oven always deselects the microwave function automatically when you press the Quick Heat button, for safety. The default setting when pressing the Quick Heat button is 175°C.

During the quick heating process both Forced air and Grill is used to raise the temperature. Do not place food before or during preheating in the oven. It will be burned from the intense heat.

If you want to cook with Forced air and microwaves combined, you have to select microwaves after the preheating is finished.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Quick Heat button.

This function can be used with the turntable function switched off.
Do not use the Crisp-plate with this function.

USER ACTION	OVEN REACTION
1. Press the QUICK HEAT button repeatedly to select a desired end temperature.	* The temperature indicator is flickering. * The set temperature is displayed.
2. Press the START button.	* The heating begins.

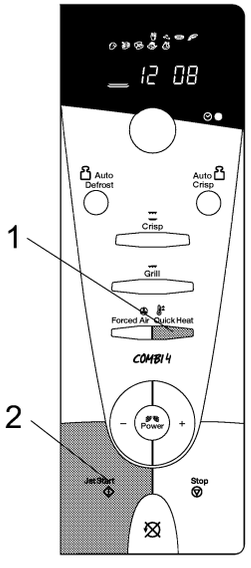



When the set temperature is reached, a signal will be heard and the oven switches to the Forced air function.

COOKING INTERRUPTION

To interrupt the cooking process:
The cooking process can be temporarily interrupted to check, turn or stir the food by opening the door. The setting will remain lit for 10 minutes to indicate the interruption, after which it will disappear. If you open the door please consider the following:

To restart the cooking process:
Close the door and press the START button once.
Note: The cooking process continues from where it was interrupted if the START button is pressed once. Pressing the START button twice will increase the time by 30 seconds.

If you don't want to continue cooking:
Remove the food, close the door and press the STOP button

If you don't interrupt the cooking process:
If the cooking process has not been interrupted, a beep will signal the completion of the programme and, if the Stop button is not pressed, will continue to sound every minute for 10 minutes.
Note: It is possible to alter both Time and Power settings while cooking though not when the automatic functions are being used.

Continued cooking:
When the cooking process is complete, the oven will hold the current settings for 10 minutes unless the STOP button is pressed or the door is opened. This enables you to continue cooking simply by pressing the START button. Cooking may also be extended by pressing the START button a number of times. One press for each 30 seconds. All other settings remain the same.
Note: The oven will only hold the settings for 30 seconds if the door is opened and then closed after the cooking is finished.

HOW TO CHOOSE POWER LEVEL?

JET
– Fast reheat of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
850/750 W
– To be used for cooking of vegetables, fish, meat etc.
650 W
– To be used when cooking dishes not possible to stir.
500 W
– To be used when more careful cooking is required e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W
– To be used when simmering stews.
160 W
– To be used for defrosting.
90 W
– To be used for softening butter, cheese and ice cream.
0 W
– To be used when setting the standing time.

OPTIONAL CLOCK DISPLAY

When the appliance is first plugged in or after a power failure, the display is blank.
If required, the oven can display a 24 hour digital Clock. When the Clock function is not programmed the display will remain blank until the cooking time is set.

Note:
If you wish to delete the Clock from the display once it has been set, simply press the Clock button and then press the Stop button. To reinstate the Clock, follow the below procedure.

Keep the door open while setting the Clock. This gives you 10 minutes to complete the setting of the Clock.

If the door is kept shut, each step must be accomplished within 30 seconds. Otherwise the oven will return to “stand by“ and it will be necessary to start again from the beginning.

	USER ACTION	OVEN REACTION
		• • * The two dots are lit.
2 4 6	1. Press the STOP button.	
	2. Press the CLOCK button.	* The two left hand digits (hours) flicker.
3 5	3. Turn the ADJUST knob to set the hours.	* The set hours will continue to flicker
	4. Press the CLOCK button again.	* The two right hand digits (minutes) flicker.
1	5. Turn the ADJUST knob to set the minutes.	* The set minutes will continue to flicker.
	6. Press the CLOCK button again.	* The Clock is set and in operation.

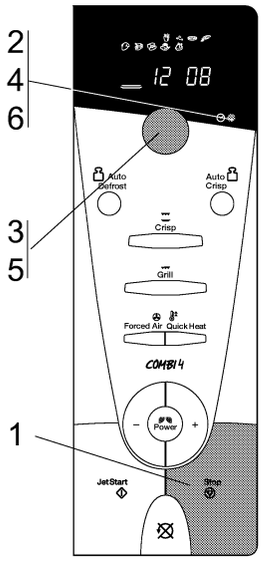

AUTO CRISP FUNCTION

Auto Crisp

USER ACTION

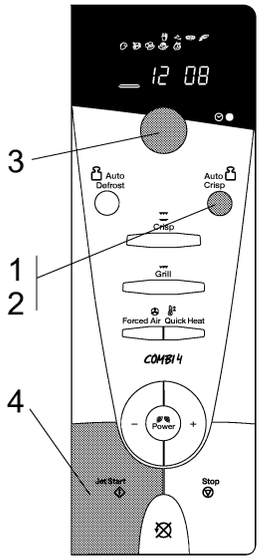

1. Press the AUTO CRISP button.
2. Continue to press the AUTO CRISP button to select the food categories needed.
3. Turn the ADJUST knob to set the weight of the food to be crisped.
4. Press the START button.

OVEN REACTION

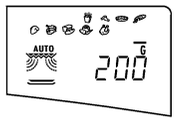

* The first of the four food categories is indicated.
* The Microwave symbol is lit.
* The Grill symbol is lit.
* The Crisp symbol is lit.

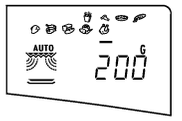

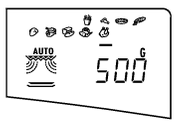

* The weight is displayed.

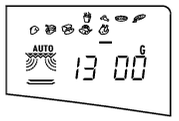

* The Microwave symbol flashes.
* The Grill symbol flashes.
* The time is displayed counting down in minutes.

When the Auto Crisp program is finished a signal will be heard and the cooking process will stop.

AUTO CRISP FUNCTION

Your microwave oven has an automatic Crisp function for frozen ready made foods. This function enables you to quickly reheat your food in one step from frozen to serving temperature. The oven needs to know the type of food to be defrosted. Four food categories have been designed into your oven. They will provide you with good end results. Each subsequent press will select the next food category.

Only use the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.

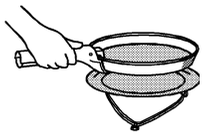

If the weight is less than recommended weight:
Use the manual "Crisp function" to crisp the food manually. Experience will give you the correct time for your favourite small amount foods.

If the weight is greater than recommended weight:
Divide the food into two or more pieces and proceed to Auto Crisp each piece separately.
If it's not possible to divide the food, you must use the manual "Crisp function" to crisp the food manually. With greater amounts it is necessary to stir or turn the food during Crisping and this is best done with the manual "Crisp function".

Auto Crisp is used only for frozen ready made foods.

Please note that a few minutes standing time always improves the result.

It is not possible to change or switch, the Power level or Grill, on/off, when using the Auto Crisp function.

PIZZA'S
(200 - 600 g)

CHICKEN NUGGETS
(200 - 600 g)

QUICHE & PIES
(200 - 600 g)

POTATO PRODUCTS
(200 - 600 g)
* French fries
* Pommes chateau
* Croquette potatoes

⚠ IMPORTANT!

Take the frozen food directly from the freezer and place it on the crisp plate.
Do not place any containers or wrappings on the Crisp plate!

Only the food is to be placed on the Crisp plate.
If possible use only pieces of the same size when reheating chicken.

JET START FUNCTION

When the Jet Start button is pressed the oven will operate at full power for 30 seconds. Each subsequent press will increase the time by 30 seconds. Pressing the Jet Start button during normal cooking simply increases the time by 30 seconds in each press. The power is not affected.

Use this function for the quick reheating of items such as clear soups, coffee, tea or other foods with high water content.

If you open and then close the door during normal cooking (cooking interruption), restarting by pressing the Jet Start button once will not affect the Time and Power settings. Pressing the Jet Start button again will increase the time by 30 seconds for each press.

This function can be used with the turntable function switched off.
Do not use the crisp-plate with the turntable on standstill.

USER ACTION

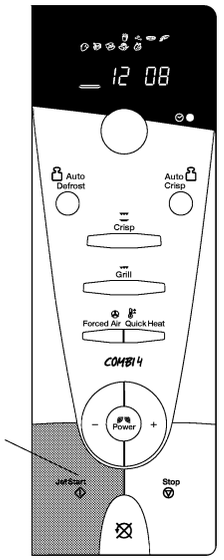

1. Press the JET START button.

OVEN REACTION

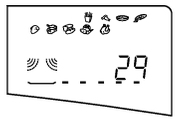

* The Microwave working symbol flashes.
* The Power level bar is scrolling.
* The cooking time is displayed counting down.



When the time has elapsed a signal will be heard and the process will stop.

TIME AND POWER

Once the cooking process has been started the time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Adjust knob to increase or decrease the time.

Pressing the POWER button (center) during cooking displays the current Power level for 2 sec. To alter the set power level, simply press the plus or minus buttons until the desired power level is reached.

This function can be used with the turntable function switched off. When cooking such foods as gratin's etc. with the turntable on standstill, you may rotate the food halfway through the cooking time.

Do not use the crisp-plate with the turntable on standstill.

TWO PLATE STACKER

The Two plate stacker is excellent for two level reheating. Simply place one plate on the Glass Turn-table and a second plate on the Two plate stacker above. The Two plate stacker may be cleaned in dishwashers.
Do not use together with the Grill or Crisp. It will melt.

TURNTABLE SUPPORT



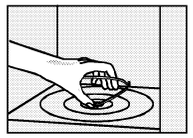

Use the turntable support under the Glass turntable. Never put other utensils than the Glass turntable directly on the turntable support. The turntable support may be cleaned in dishwashers.

* Fit the turntable support on its locator in the oven.

GLASS TURNTABLE

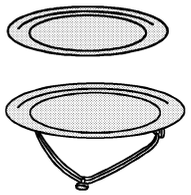

Use the Glass turntable with all cooking methods. The Glass turntable collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven. The Glass turntable may be cleaned in dishwashers.

* Place the Glass turntable on the turntable support.

COVER

Always use the supplied cover with this function except when reheating soups in which case the cover is not needed !

USER ACTION

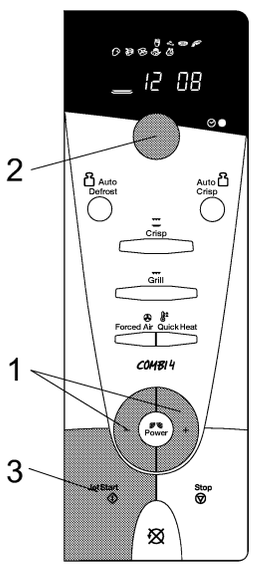

1. Press the **+** / **-** buttons to select a desired Power level.
2. Turn the ADJUST knob until the required time is indicated.
3. Press the START button.

OVEN REACTION

* The power level is displayed.

* The time is displayed.

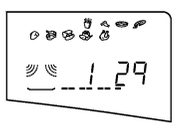

* The Microwave working symbol flashes.
* The cooking time is displayed counting down

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

CRISP FUNCTION

The Crisp-plate will give foods such as pizzas and pies a nice crisp, brown under surface. Use this function to reheat and crisp pre-cooked pizzas and other dough based foods. Use it also to fry bacon and eggs, sausages, hamburgers etc.
Do not place any utensils on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.
Place foods directly on the Crisp-plate having first smeared it with a little fat. This will make cleaning the Crisp-plate after use much easier.
The oven automatically works with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.
The Crisp-plate may be preheated before use (max. 3 min). Always use the Crisp function when preheating the crisp-plate.
It is not possible to change or switch, the Power level or Grill, on/off, when using the Crisp function.

CRISP-PLATE

Place the food directly on the Crisp-plate. Always use the Glass turntable as support when using the Crisp-plate. Do not clean in dishwashers. The Crisp-plate can be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser. Always let the crisp-plate cool off before cleaning. Do not immerse or rinse with water while the crisp-plate is hot. Quick cooling will damage it.
Do not use steel-wool pads. This will scratch the surface.

CRISP HANDLE

Use the supplied special Crisp handle to remove the hot Crisp plate from the oven. The Crisp handle may be cleaned in dishwashers.

⚠ CAUTION!

The oven and the crisp-plate become very hot when using this function.
Do not place the hot crisp-plate on any surface sucseptable to heat.
Use oven mittens or **the special Crisp handle** supplied when removing the hot Crisp-plate.
Do not touch the ceiling beneath the Grill element.
Ensure that the Crisp-plate is correctly placed in the middle of the Glass turntable.

USER ACTION

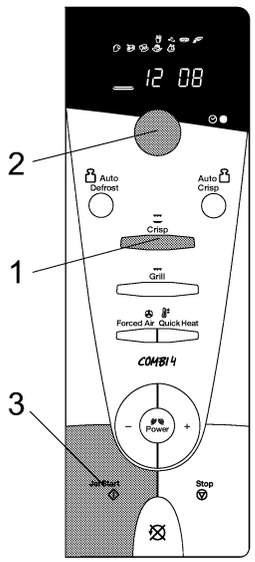

1. Press the CRISP button.
2. Turn the ADJUST knob until the required time is indicated.
3. Press the START button.

OVEN REACTION

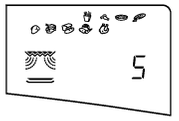

* 5 sec is displayed
* The Grill symbol is lit
* The Crisp symbol is lit
* The Microwave symbol is lit.

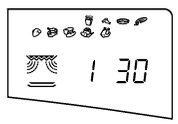

* The time is displayed.

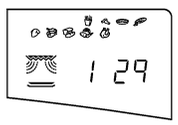

* The Microwave symbol flashes.
* The Grill symbol flashes
* The cooking time is displayed counting down

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

GRILL IN COMBINATION WITH MICROWAVES

During operation you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited(see technical specifications).

Important!
Ensure that the utensils you use are ovenproof and will allow microwaves to pass through them before using the Grill/Microwave combination.

This function can be used with the turntable function switched off. When cooking such foods as gratin's etc. with the turntable on standstill, you may rotate the food halfway through the cooking time.

Do not use the crisp-plate with the turntable on standstill.

It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode. You should only use this feature if the turntable function is in operation, else the oven will switch off when 0 W is reached.

How to choose the correct power level	
Power level	**Suitable foods**
90 - 160 W	Large cuts of Meat
160 - 350 W	Fish
350 - 500 W	Poultry
500 - 650 W	Gratins

USER ACTION | OVEN REACTION

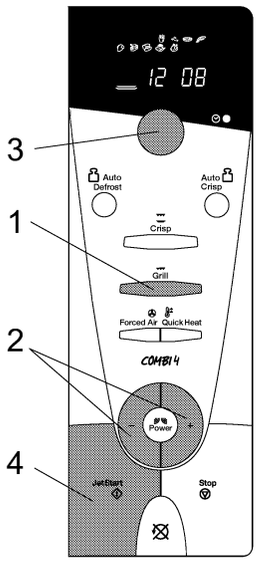

1. Press the GRILL button.

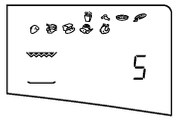

* 5 sec is displayed.
* The Grill symbol is lit.

2. Press the **+** / **-** POWER button to select a desired Power level.

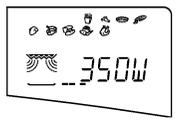

* The Microwave symbol is lit.
* The powerlevel is displayed.

3. Turn the ADJUST knob until the required time is indicated.

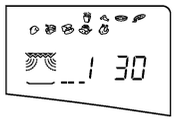

* The time is displayed.

4. Press the START button.

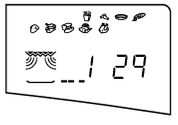

* The Microwave symbol flashes.
* The Grill symbol is flickering.
* The cooking time is displayed counting down.



When the cooking time has elapsed a signal will be heard and the cooking process will stop.

AUTO DEFROST FUNCTION

Your microwave oven has a special automatic defrosting function, which provides you with good end results. The oven needs to know the type of food to be defrosted and the net weight of the food.

Five food classes have been designed into your oven and they cover the whole spectrum of food. Each subsequent press will select the next food class.
Auto Defrost is used for defrosting of **raw, parboiled, pre-cooked food** and **bread.**

MEAT
(50 g - 2 Kg)
* Pork chops
* Steaks
* Roasts
* Minced meat

FISH
(50 g - 2 Kg)
* Cod steaks
* Plaice fillets
* Trout

BREAD
(50 g - 2 Kg)
* Buns
* Rolls
* Bread loaf
* Biscuits

VEGETABLES
(50 g - 2 Kg)
* Broccoli
* Cauliflower
* Mixed vegetables

POULTRY
(50 g - 3 Kg)
* Chicken, whole or in pieces

⚠ IMPORTANT!

When using the automatic defrost function, the weight to be entered is the net weight in grams meaning only the weight of the food, the vessel excluded.



The Auto defrost function gives best results, if the food is at -18°C and the food to be defrosted is taken directly from the freezer.
If the food is warmer than deep-freeze temperature (-18°C) e.g. is stored in the freezing compartment of the refrigerator, which is not a three star, the defrosting time calculated by the oven will be too long and you may risk over-cooking the food.
Choose in that case lower weight of the food and by that shorter defrosting time.
Choose also lower weight of the food to be defrosted, if the food is stored outside the freezer for times up to 20 minutes.
Defrost by time and power if the food is stored outside the freezer for more than 20 minutes and for defrosting ready-made food. Standing time always improves the result.
Small pieces of aluminium foil may be used to shield e.g. chicken wings, leg tips and fish-tails but the foil must not touch the side of the oven as damage may occur.

AUTO DEFROST FUNCTION

Auto Defrost

USER ACTION	OVEN REACTION
1. Press the AUTO DEFROST button.	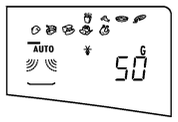 * The display now shows weight in grams (gr.) and the first of the five food classes is indicated.
2. Continue to press the AUTO DEFROST button to select the food class needed	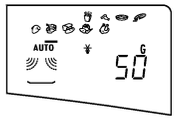
3. Turn the ADJUST knob to set the weight of the food to be defrosted.	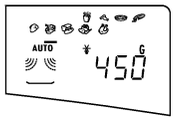 * The weight is displayed.
4. Press the START button.	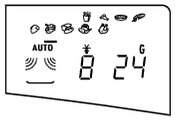 * The defrosting process begins. * The Microwave working symbol flashes. * The defrosting time is displayed counting down

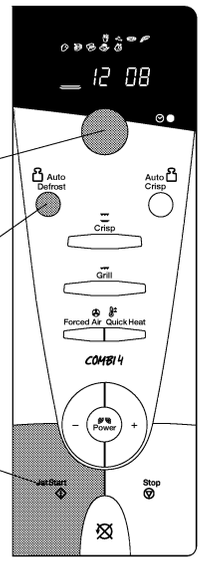

When the Defrost program is finished a signal will be heard and the defrosting process will stop.

MANUAL DEFROST FUNCTION

Follow the procedure for "Time and Power" and choose ✳ 160 W when defrosting manually.

When softening ice-cream or butter you should adjust the setting to 90 W.

Check and inspect the food regularly. Experience will give you the times needed for various amounts.

GRILL FUNCTION

The Grill which is located in the ceiling of the oven compartment, will quickly give a pleasant brown surface to the food.

Do not leave the oven door open for long periods when the Grill is in operation as this will cause a drop in temperature.

IMPORTANT!

Ensure that the utensils used are heat resistant and oven proof before grilling with them.
Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.

Note:
Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

USER ACTION	OVEN REACTION
1. Press the GRILL button.	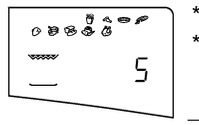 * 5 sec is displayed. * The Grill symbol is lit.
2. Turn the ADJUST knob until the required time is indicated.	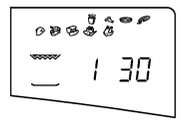 * The time is displayed.
3. Press the START button.	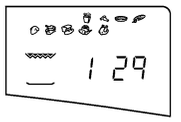 * The Grill symbol flashes * The cooking time is displayed counting down.

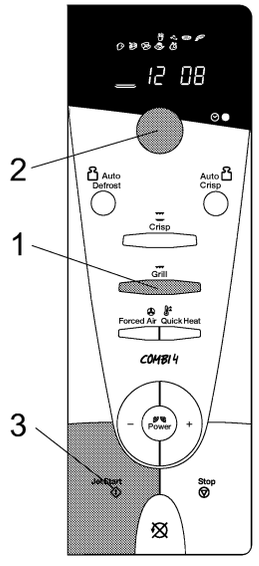



When the cooking time has elapsed a signal will be heard and the cooking process will stop.

BAKING GRID



Use the Baking Grid to put food on, to allow the air to circulate properly around the food.